



CONNECTION METHOD




STEP 1

Download the WiLife smart app at
Wilfa.com/app
Or scan the QR-code.



STEP 2

Ensure Bluetooth is enabled on your phone.
Connect to Wi-Fi
(Network requirement: 2,4GHz)

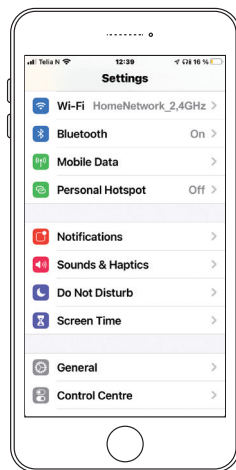

STEP 3

Hold the on/off button for 3-5 seconds to make it searchable.



Power




Max 10 m
distance



STEP 4

Open the app, and press the plus icon in the top right corner.

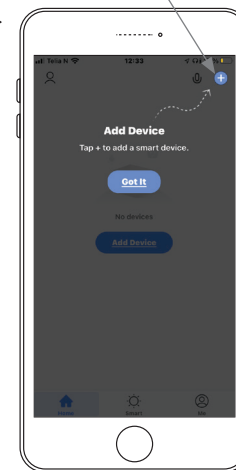

The option to add the device should appear automatically on the bottom of your screen.

➔ Follow further instructions on the app.

! If you experience any connection issues, please see instruction manual or contact support@wilfa.com

HU1DT-430C_30_01